

MOBIL DISPENSING TANK MODEL 273036



MOBIL DISPENSING TANK MODEL 273036

Portable Tank Assembly Instructions


Parts list: Portable Tank, 2 Handles, 2 pneumatic tires, 1-5/8 dia axle, 6-5/8 stainless washers, 2 plastic spacers, 2 Pal nuts, 4 Phillips Head 1-1/2" screws with washers.

Assembly Instructions


1. Place the Portable Tank face down and position the handles in the handle groves with the curved ends at the top pointing up.




- 4. On each end of the axle in this order place a washer spacer washer tire washer and Pal nut (See Drawing 2) To seat the Pal nut correctly place the nut on the axle and tap it with a hammer until the axle reaches the full depth of the nut (See Drawing 3) (Note For best results before putting on Pal nut lay caddy on its side with the axle perpendicular to the floor This should help seating the Pal nuts correctly)
- 5. Tighten the 4 Phillips Head screws securely.

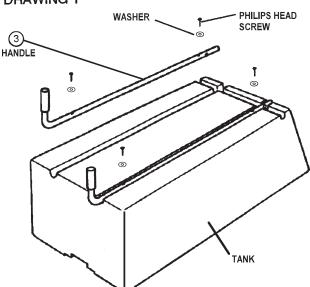

- 2. Slide the axle through the handles
- 3. Insert the 4 Phillips Head screws with washers through the holes in the handles and loosely attach the handles to the Portable Tank

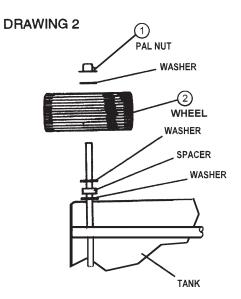



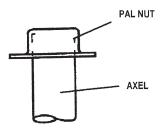

Item	Description	Part No.	ltem	Description	Part No.
1	Pal Nut (2 Req'd)	272874	3	Handle (2 Req'd)	272976
2	Wheel	272975	4	Fillercap (Not Shown)	272977

DRAWING 1



PORTABLE TANK FILLING INSTRUCTIONS

- 1. Fill the Tank in a horizontal position only.
- 2. Remove vented fill cap.
- 3. Fill tank. **CAUTION:** Do not overfill Tank. 28 gallon maximum capacity.
- 4. Replace fill cap and check that vent is closed.

PORTABLE TANK DISPENSING INSTRUCTIONS

- 1. Tank should be in the vertical position.
- 2. Twist the fill cap vent screw one turn counter-clockwise. This allows the tank to vent and fuel to flow smoothly.
- 3. Insert the control valve and squeeze control valve to start dispensing fluid.
- 4. When fuel transfer is complete, release the control valve handle to stop flow.
- 5. Close the fill cap vent.

LIMITED WARRANTY

LINCOLN warrants the equipment it supplies to be free from defects in material and workmanship for one (1) year following the date of purchase. If equipment proves to be defective during this warranty period it will be repaired or replaced, at Lincoln's discretion, without charge provided that factory authorized examination indicates the equipment to be defective. To obtain repair or replacement, you must ship the equipment, transportation charges prepaid, with proof of date of purchase to a Lincoln authorized warranty and service center, within one (1) year following the date of purchase.

LIMITED 5 YEAR WARRANTY (Series 20, 25, 40 Bare Pumps, Heavy Duty and Golden Standard Bare Reels).

Lincoln warrants series 20, 25, 40 bare pumps, and heavy duty and golden standard bare reels it supplies to be free from defects in material and workmanship for one (1) year following the date of purchase. If equipment proves to be defective during the warranty period it will be repaired, or replaced, at Lincoln's discretion, without charge provided that factory authorized examination indicates the equipment to be defective. To obtain repair or replacement, you must ship the equipment, transportation charges prepaid, with proof of purchase to a Lincoln Authorized Warranty and Service Center within one (1) year following the date of purchase. Additionally, in years two (2) and three (3) the warranty on this equipment is limited to repair with Lincoln paying parts and labor only. In years four (4) and five (5), the warranty on this equipment is limited to repair with Lincoln paying for parts only.

This warranty is extended to the original retail purchaser only. It does not apply to equipment damaged from accident, overload, abuse, misuse, negligence, faulty installation or abrasive or corrosive material, or to equipment repaired or altered by anyone not authorized by Lincoln to repair or alter the equipment. This warranty applies only to equipment installed and operated according to the recommendations of Lincoln or its authorized field personnel. No other express warranty applies.

Any implied warranties applicable to equipment supplied by Lincoln, including the warranties of merchantability and fitness for a particular purpose, will last for only one (1) year from the date of purchase. Some jurisdictions do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

In not event shall Lincoln be eligible for incidental or consequential damages. Lincoln's ability on any claim for loss or damages arising out of the sale, resale or use of equipment it supplies shall in no event exceed the purchase price. Some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

This warranty gives you specific legal rights. You may also have other rights that vary by jurisdiction.



Americas: One Lincoln Way St. Louis, MO 63120-1578 USA Phone +1.314.679.4200 Fax +1.800.424.5359 Europe/Africa: Heinrich-Hertz-Str 2-8 D-69183 Walldorf Germany Phone +49.6227.33.0 Fax +49.6227.33.259 Asia/Pacific: 25 Int'l Business Park #01-65 German Centre Singapore 609916 Phone +65.562.7960 Fax +65.562.9967 Form 444444 © Copyright 1999 Printed in USA

Web site: www.lincolnindustrial.com